


Windows 10 Updates & Pausing on a Trimble TSC7/T7/T10


Windows 10 can and will download updates whenever your controller is connected to the internet either by wifi or a sim. These updates may download in the background and install when you turn the device off. However, some updates will continue to install the next time you switch the device on. When this happens, the controller must complete the updates before you can start to use the device, which can be an inconvenience especially if you need to use the equipment.

This guide will explain how to manage these updates, so you decide when the updates take place.


- 1) Firstly, turn on the device to show the main Windows10 desktop and click on the windows icon in the bottom left hand corner & click on the settings cog

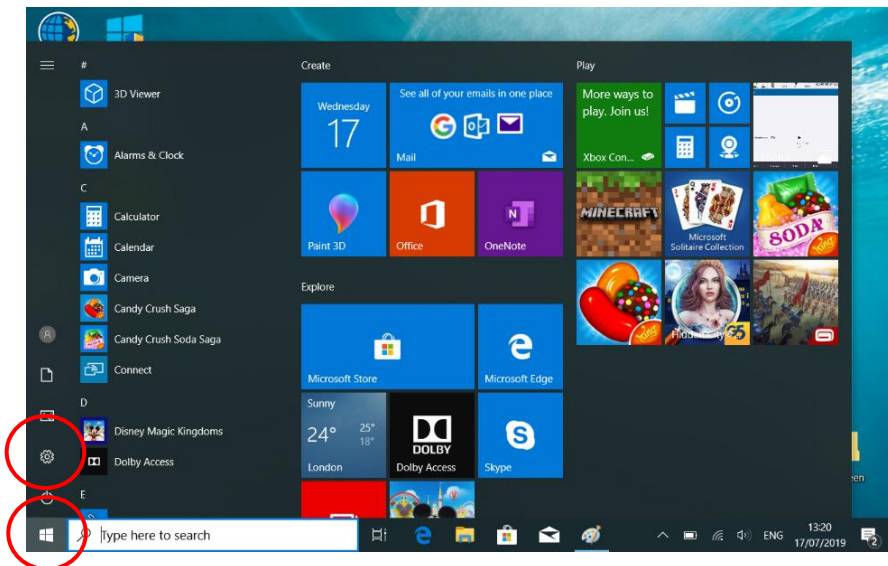


- 2) In the settings window scroll down and click on Update & Security

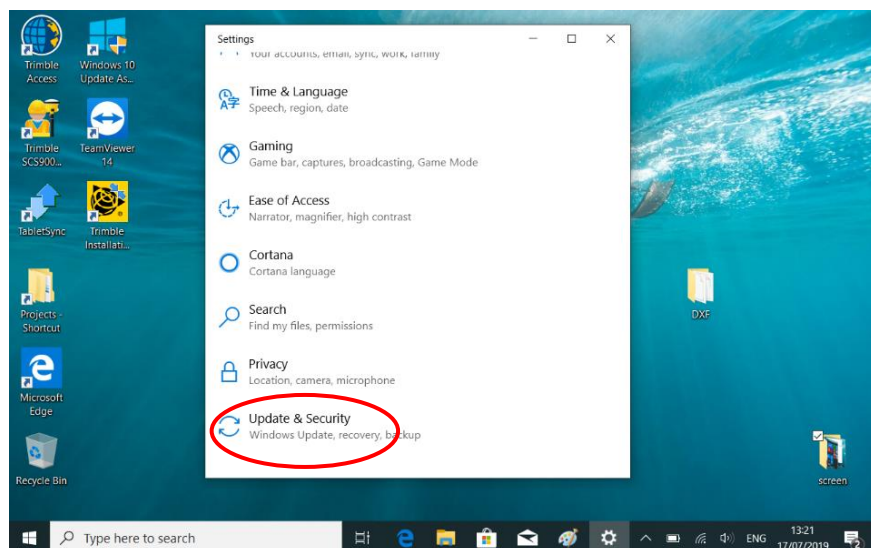

3) Click on windows update

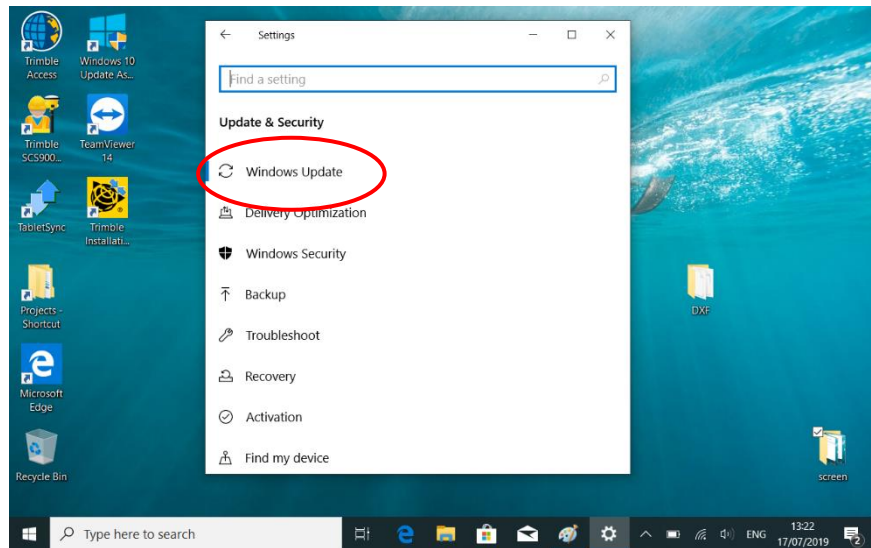


4) click on check for updates, if your controller is connected to the internet windows 10 will download and install any recent updates that are available.

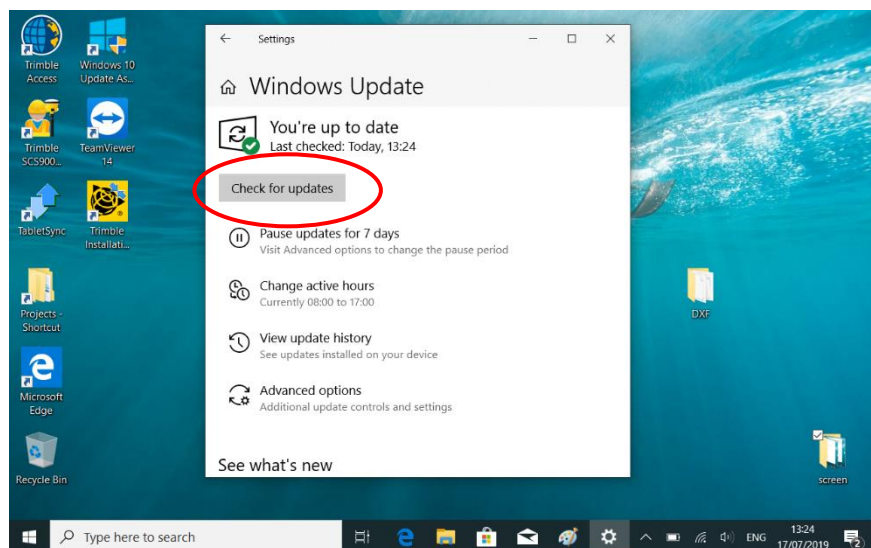


5) Once the updates have installed, we recommend you restart the Windows 10 device, by clicking on the Windows icon, click on the power icon and choose restart. By doing this any dormant or un-completed updates will now be carried out.

Your device should now be up to date. To make doubly sure, you can repeat steps 1-5 again.


6) To pause any future updates for upto 7 days, within the settings window click on the 'Pause updates for 7 days icon'

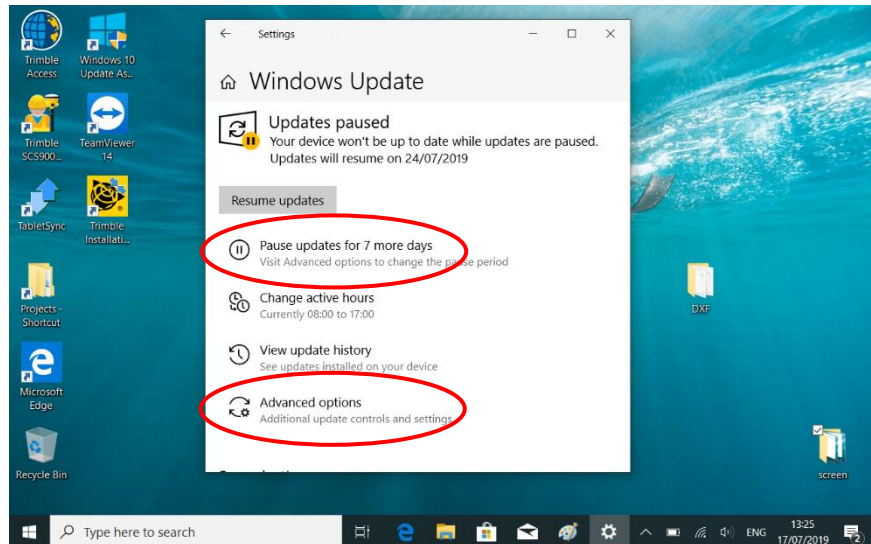


7) Should you wish to pause updates for up to 35 days, click on 'Advanced options', which will open the window below, we recommend all options are turned off. Now scroll down to Pause Updates.

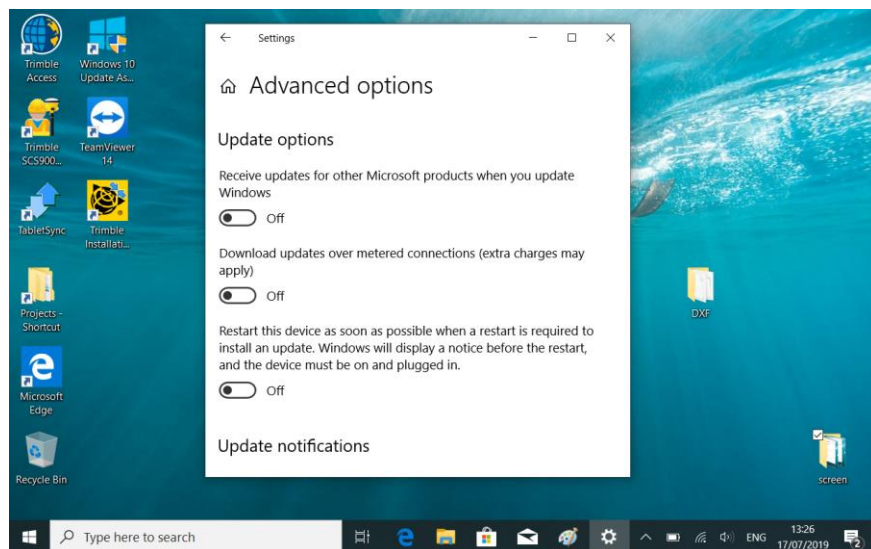

8) You are able to pause windows updates for up to 35 days from now. Open the Pause until drop down menu

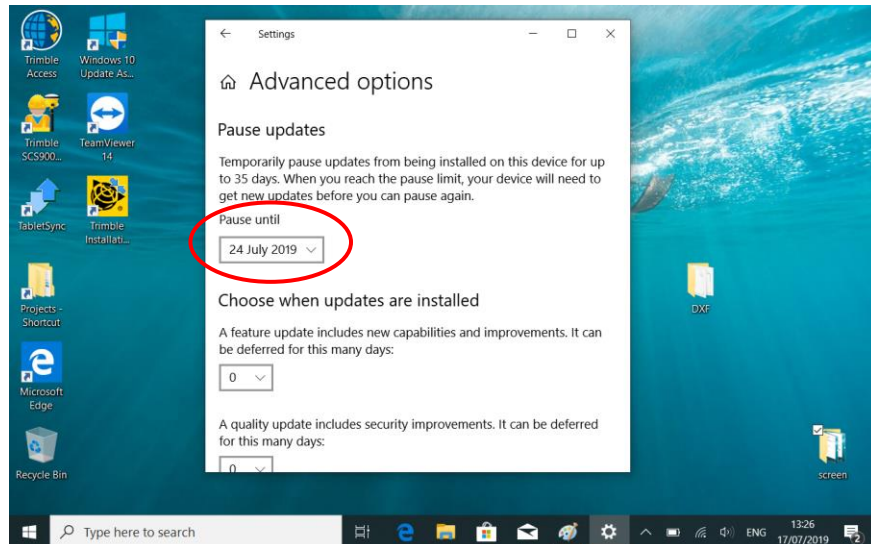

9) Select the last date in the list and close the window

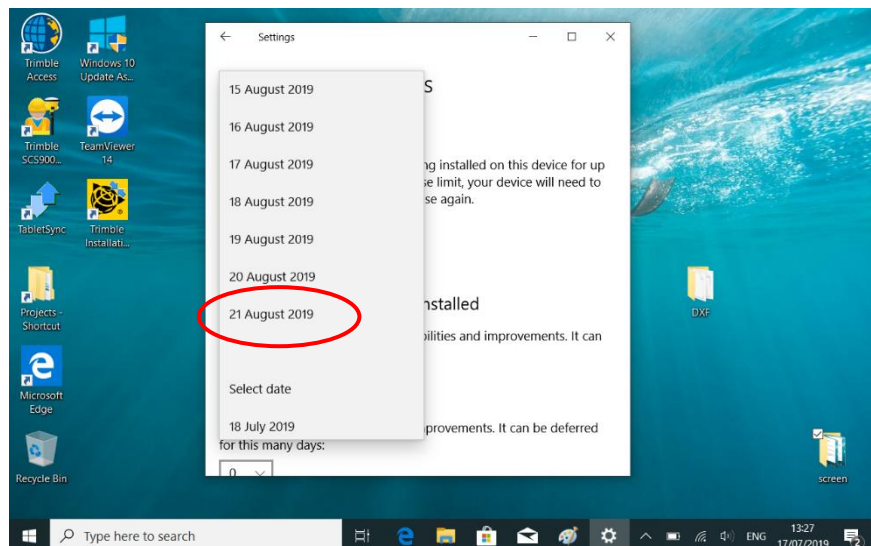

10) Your device will now not check for updates for the next 35 days. When this date has passed, your device will request you to check for updates before you are able to pause again for another period of days.

Trimble do recommend that you regularly check your device for Windows 10 updates so that your unit is using the latest drivers at all times.